















| Scooter Model " ES250 B " | | | | |
|---------------------------|---|---|-----|-----|
| Code | Photo | Description | Qty | |
| 250T-B-000001 |  | up axletree groupware | 1 | set |
| 250T-B-000002 |  | down axletree groupware | 1 | set |
| 250T-B-000003 |  | compaction nut | 2 | pcs |
| 250T-B-000004 |  | hang frame axes I | 1 | pcs |
| 250T-B-000005 |  | hang frame axes II | 1 | pcs |
| 250T-B-001001 |  | l rearview mirror | 1 | pcs |
| 250T-B-001002 |  | r rearview mirror | 1 | pcs |
| 250T-B-002001 |  | seat | 1 | pcs |
| 250T-B-002002 |  | seat install board | 1 | pcs |
| 250T-B-003001 |  | L hand | 1 | pcs |
| 250T-B-003002 |  | R hand | 1 | pcs |
| 250T-B-003003 |  | carrier plate (steel) | 1 | pcs |
| 250T-B-003004 |  | carrier plate cover | 1 | pcs |
| 250T-B-003005 |  | Rr backrest | 1 | pcs |
| 250T-B-003006 |  | rear goods bush | 4 | pcs |
| 250T-B-003007 |  | rear hual hole | 4 | pcs |
| 250T-B-010001 |  | fr axle | 1 | pcs |
| 250T-B-010002 |  | fr axle | 1 | pcs |
| 250T-B-010003 |  | rubber ring | 1 | pcs |
| 250T-B-010004 |  | disc brake pump vitta thread nip(I) | 1 | pcs |
| 250T-B-010005 |  | disc brake pump vitta thread nip(II) | 1 | pcs |
| 250T-B-010006 |  | Fr fender | 1 | pcs |

| | | | | |
|---------------|---|--------------------------|---|-----|
| 250T-B-010101 |  | lower connecting board | 1 | pcs |
| 250T-B-010102 |  | Rr L shock absorber | 1 | pcs |
| 250T-B-010103 |  | Fr R shock absorber | 1 | pcs |
| 250T-B-010201 |  | Fr al wheel | 1 | pcs |
| 250T-B-010202 |  | valve mouth | 2 | pcs |
| 250T-B-010203 |  | vacual tire | 2 | pcs |
| 250T-B-010204 |  | Fr disc brake plate | 1 | pcs |
| 250T-B-010205 |  | Fr disc brake plate srew | 6 | pcs |
| 250T-B-010300 |  | driver | 1 | pcs |
| 250T-B-010400 |  | Fr disc brake pump | 1 | pcs |
| 250T-B-020101 |  | L handle covr | 1 | pcs |
| 250T-B-020102 |  | steering handle | 1 | pcs |
| 250T-B-020103 |  | fixing seat, throttle | 1 | pcs |
| 250T-B-020104 |  | R handle | 1 | pcs |
| 250T-B-020105 |  | handle back balance | 2 | pcs |
| 250T-B-020201 |  | speedomter cover | 1 | pcs |
| 250T-B-020202 |  | speedometer | 1 | pcs |
| 250T-B-020203 |  | starter switch | 1 | pcs |
| 250T-B-020204 |  | headlight switch | 1 | pcs |
| 250T-B-020205 |  | fire-out switch | 1 | pcs |

| | | | | |
|---------------|---|-----------------------------|---|-----|
| 250T-B-020206 |  | horn switch | 1 | pcs |
| 250T-B-020207 |  | direction indicator switch | 1 | pcs |
| 250T-B-020208 |  | high / dipped beam switch | 1 | pcs |
| 250T-B-020209 |  | speedomter covr Fr | 1 | pcs |
| 250T-B-020210 |  | windshield | 1 | pcs |
| 250T-B-020211 |  | windshield | 1 | pcs |
| 250T-B-020300 |  | speedomter cable | 1 | pcs |
| 250T-B-020400 |  | throttle cable | 1 | pcs |
| 250T-B-030001 |  | seat lock | 1 | set |
| 250T-B-030002 |  | spring, side stand | 1 | pcs |
| 250T-B-030003 |  | spring, main stand | 1 | pcs |
| 250T-B-030004 |  | protecting cover, seat lock | 1 | pcs |
| 250T-B-030100 |  | frame | 1 | pcs |
| 250T-B-030200 |  | horn bracket | 1 | pcs |
| 250T-B-030300 |  | bracket, tail light | 1 | pcs |
| 250T-B-030401 |  | side stand | 1 | pcs |
| 250T-B-030402 |  | single support bolt | 1 | pcs |
| 250T-B-030501 |  | main stand | 1 | pcs |
| 250T-B-030502 |  | rubber, main stand | 1 | pcs |

| | | | | |
|---------------|---|------------------------------|---|-----|
| 250T-B-030503 |  | big support bush | 2 | pcs |
| 250T-B-030601 |  | hanger | 1 | pcs |
| 250T-B-030602 |  | hanger rubber (big) | 1 | pcs |
| 250T-B-030603 |  | hanger rubber (small) | 1 | pcs |
| 250T-B-030701 |  | L foot | 1 | pcs |
| 250T-B-030702 |  | R foot | 1 | pcs |
| 250T-B-030801 |  | L foot bracket | 1 | pcs |
| 250T-B-030802 |  | R foot bracket | 1 | pcs |
| 250T-B-030900 |  | seat lock (big) | 1 | pcs |
| 250T-B-031001 |  | seat lock (small) | 1 | pcs |
| 250T-B-031002 |  | seat lock block | 1 | pcs |
| 250T-B-031003 |  | press board, seat lock block | 1 | pcs |
| 250T-B-040001 |  | muffler cushion | 1 | pcs |
| 250T-B-040002 |  | Rr wheel bush (ling) | 1 | pcs |
| 250T-B-040003 |  | Rr wheel bush (short) | 1 | pcs |
| 250T-B-040100 |  | Engine | 1 | pcs |
| 250T-B-040200 |  | Rr al wheel | 1 | pcs |
| 250T-B-040300 |  | connecting board | 1 | pcs |
| 250T-B-040401 |  | Rr disc brake pump | 1 | pcs |

| | | | | |
|----------------|---|-------------------------------|---|-----|
| 250T-B-040402 |  | Rr disc brake plate | 1 | pcs |
| 250T-B-040403 |  | Rr disc brake screw | 3 | pcs |
| 250T-B-040501 |  | muffler | 1 | pcs |
| 250T-B-040501A |  | muffler | 1 | pcs |
| 250T-B-040502 |  | muffler tie-in | 1 | pcs |
| 250T-B-040503 |  | Graphite pad | 1 | pcs |
| 250T-B-040601 |  | L Rr shock absorber | 1 | pcs |
| 250T-B-040602 |  | R Rr shock absorber | 1 | pcs |
| 250T-B-040700 |  | carburetor | 1 | pcs |
| 250T-B-040801 |  | air cleaner | 1 | pcs |
| 250T-B-040802 |  | air cleaner take-over | 1 | pcs |
| 250T-B-040803 |  | air filter hoop | 2 | pcs |
| 250T-B-050001 |  | L protector | 1 | pcs |
| 250T-B-050002 |  | R protector | 1 | pcs |
| 250T-B-050003 |  | L moulding | 1 | pcs |
| 250T-B-050004 |  | R moulding | 1 | pcs |
| 250T-B-050005 |  | Rr moulding | 1 | pcs |
| 250T-B-050006 |  | L foot board | 1 | pcs |
| 250T-B-050007 |  | R foot board | 1 | pcs |
| 250T-B-050008 |  | windage clapboard, foot board | 1 | pcs |
| 250T-B-050009 |  | Fr fender Rr | 1 | pcs |

| | | | | |
|-----------------|---|----------------------------------|---|-----|
| 250T-B-050010 |  | Frame fender | 1 | pcs |
| 250T-B-050011 |  | L footskin | 1 | pcs |
| 250T-B-050012 |  | R footskin | 1 | pcs |
| 250T-B-050101 |  | front cover | 1 | pcs |
| 250T-B-050102 |  | L/R sides reflect implement | 2 | pcs |
| 250T-B-050103 |  | headlight | 1 | pcs |
| 250T-B-050104 |  | headlight bracket | 1 | pcs |
| 250T-B-050105 |  | L direction indicator | 1 | pcs |
| 250T-B-050106 |  | R direction indicator | 1 | pcs |
| 250T-B-050201 |  | Fr cover, luggage box | 1 | pcs |
| 250T-B-050202.1 |  | lock cover, fuel tank | 1 | pcs |
| 250T-B-050202.2 |  | Split pin φ2X25 | 2 | pcs |
| 250T-B-050203 |  | small clap, luggage box Fr cover | 1 | pcs |
| 250T-B-050301 |  | outer cover, luggage box | 1 | pcs |
| 250T-B-050302 |  | luggage box | 1 | pcs |
| 250T-B-050303.1 |  | battery cover | 1 | pcs |
| 250T-B-050303.2 |  | inner cover, luggage box | 1 | pcs |
| 250T-B-050303.3 |  | inner cover, luggage box (small) | 1 | pcs |
| 250T-B-050304 |  | Rr fender | 1 | pcs |

| | | | | |
|---------------|---|------------------------------|---|-----|
| 250T-B-050305 |  | license bracket | 1 | pcs |
| 250T-B-050306 |  | rr reflector | 1 | pcs |
| 250T-B-050307 |  | Rr tail light | 1 | pcs |
| 250T-B-050308 |  | Connecting cover, tail light | 2 | pcs |
| 250T-B-050401 |  | R body side cover | 1 | pcs |
| 250T-B-050402 |  | L body side cover | 1 | pcs |
| 250T-B-050403 |  | Rr body side cover | 1 | pcs |
| 250T-B-050404 |  | seat lock cable (long) | 1 | pcs |
| 250T-B-050405 |  | seat lock cable (short) | 1 | pcs |
| 250T-B-050501 |  | tool box | 1 | pcs |
| 250T-B-050502 |  | connecting cover , tool box | 1 | pcs |
| 250T-B-050503 |  | number cover | 1 | pcs |
| 250T-B-060100 |  | fuel tank | 1 | pcs |
| 250T-B-060200 |  | fuel sensor | 1 | pcs |
| 250T-B-060300 |  | fuel pump | 1 | pcs |
| 250T-B-060400 |  | fuel filter | 1 | pcs |
| 250T-B-060500 |  | Cap comp fuel filler | 1 | pcs |
| 250T-B-060001 |  | sensor press board | 1 | pcs |
| 250T-B-060002 |  | sensor airproof circle | 1 | pcs |

| | | | | |
|---------------|---|---------------------|---|-----|
| 250T-B-060003 |  | gasoline pipe | 3 | set |
| 250T-B-060004 |  | pressure pipe | 1 | pcs |
| 250T-B-060005 |  | oil pipe spring | 1 | set |
| 250T-B-070100 |  | wire harness, main | 1 | pcs |
| 250T-B-070200 |  | Battery | 1 | pcs |
| 250T-B-070300 |  | ignition coil comp | 1 | pcs |
| 250T-B-070400 |  | C. D. I unit | 1 | pcs |
| 250T-B-070500 |  | Horn | 1 | pcs |
| 250T-B-070600 |  | Starting comp Relay | 1 | pcs |
| 250T-B-070700 |  | wire harness, sub | 1 | pcs |
| 250T-B-070001 |  | Winker comp Relay | 1 | pcs |
| 250T-B-070002 |  | rectifier | 1 | pcs |
| 250T-B-070003 |  | cathode cable | 1 | pcs |
| 250T-B-070004 |  | anode cable | 1 | pcs |
| 250T-B-080101 |  | Water tank | 1 | pcs |
| 250T-B-080102 |  | Cool fan | 1 | pcs |
| 250T-B-080103 |  | Water sensor | 1 | pcs |
| 250T-B-080201 |  | Water pot | 1 | pcs |
| 250T-B-080202 |  | Water pot cover | 1 | pcs |
| 250T-B-080203 |  | Add water groupware | 1 | set |

| | | | | |
|---------------|---|----------------------------------|---|-----|
| 250T-B-080204 |  | water pipe hoop | 1 | set |
| 250T-B-080301 |  | Whole water pipe assy. | 1 | set |
| 250T-B-080302 |  | in-out water pipe protect spring | 2 | pcs |
| 250T-B-080000 |  | the whole standard piece | 1 | set |
| 250T-B-090010 |  | wrap | 1 | set |
| 250T-B-090020 |  | tool with motorcycle | 1 | set |
| 250T-B-090030 |  | Stickers | 1 | set |
| 250T-B-090040 |  | Aluminum plate | 1 | pcs |
| 250T-B-090060 |  | Rear trunk | 1 | set |
| 250T-B-090060 |  | Burglar alarm | 1 | set |
| 250T-B-090070 |  | Burglar alarm press board | 1 | pcs |
| 250T-B-090080 |  | Kill switch(optional) | 1 | pcs |
| 250T-B-090090 |  | carbon tin | 1 | set |
| 250T-B-090100 |  | Aluminum footsfin | 1 | set |